



Battery Charging

Use the MS340B for the first time, you will need to fully charge the battery. It takes approximately 5 hours to fully charge the battery.

1. Plug the adapter cable into the power socket on the bottom of cradle.
2. Plug the AC adapter cord into an electrical outlet.
3. Place the scanner in the cradle. The scanner LED will be red to indicate charging and turn green when it is fully charged.

Configuration Flow Chart

(Please scan the following barcodes for configuration)

① Scan Start of Configuration

Start Configuration



② Scan all necessary labels for parameters that meet applications

Interface Selection :
RS232 Mode Parameters
Reading Mode Selection
Symbologies Selection



③ Scan End of Configuration to end the programming

End Configuration



④ To permanently save the settings by your programmed, just scan label for Save Parameters.

Save Parameters



Scanner Mode

A. SPP Master Mode*

SPP Master Mode*



Note : The scanner must scan the BT MAC address code located on the bottom of the cradle after scanning "SPP Master Mode" barcode.

B. SPP Slave Mode

SPP Slave Mode



Note : When control the BT device to search the scanner, enter pin code (default 00:00:00) to setup comport.

C. HID Slave Mode

HID Slave Mode



Note : When control the BT device to search the scanner, enter pin code (default 00:00:00) to setup pairing.

PAN Configuration

A. Auto Mode

Auto Mode Enable *



Auto Mode Disable

 


B. Sleep Mode

Sleep Mode OFF*



Sleep Mode 1 min. ON



Sleep Mode 10 min. ON



C. Batch Mode

Batch Mode OFF*



Batch Mode ON



Delete Last Data **



Batch Data Read **



Batch Data Clear **



* : Default Option

** : Quick Setting Label

The function can be executed directly by scanning barcode instead of following the configuration flow chart process.

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.

Test & Finish

Please scan the following barcode. If the word "unitech" appears on your screen, the scanner has been successfully installed.



Set All Defaults**



iOS Hotkey Function

iOS Hotkey Disable *



iOS Hotkey Enable



Cradle Interface Selection

USB Mode *



RS232 Mode



Reading Mode Selection

Trigger ON/OFF *



Continuous/Trigger OFF



Continuous/Auto Power On



Flash/Auto Power On



Good Read OFF



Testing



Flash



Presentation



Terminator Selection

CR*



Space



STX-ETX



CR+LF



HT (TAB)



LF



None



Language Selection

US English*



UK English



Italian



Spanish



French



German



Swedish



Switzerland



Hungarian



Japanese



Belgium



Portuguese



Denmark



Netherlands



Turkey



* : Default Option

** : Quick Setting Label

The function can be executed directly by scanning barcode instead of following the configuration flow chart process.

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.