




Connecting the Scanner

Follow the steps below to connect the scanner:

1. Insert the USB connector into the port on the scanner.
2. Connect the USB connector of the USB cable to the USB port of a host PC.

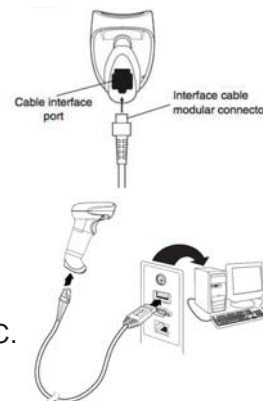

Trigger Mode

Manual Trigger-Normal *



Presentation Mode



Aimer Mode

Interlaced *



Off



Mobile Phone Read Mode

Hand Held Scanning -
Mobile Phone



Presentation Scanning -
Mobile Phone



Factory Default

Factory Default



Report Software Version

Show Decoder Revision



Show Software Revision



Suffix

Add Tab Suffix



Add CR Suffix



Remove Suffix



Language Selection

US English*



UK English



Italian



Italian (142)



Spanish



Spanish Variation



French



German



Swedish



Switzerland (German)



Switzerland (French)



Hungarian



Hungarian (101 key)



Denmark



Japanese



Belgium



Portuguese



Netherlands



Turkey-F



Turkey-Q



* : Default Option

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.

Symbologies

Interleaved 2 of 5

ON*



OFF



Default All Interleaved
2 of 5 Settings



UPC-A

ON*



OFF



Default All UPC-A Settings



EAN/ JAN-13

ON*



OFF



Default All EAN/ JAN
-13 Settings



EAN/ JAN-8

ON*



OFF



Default All EAN/ JAN-8 Settings



Code 39

ON*



OFF



Default All Code 39
Settings



GS1-128

ON*



OFF



Default All GS1-
128 Settings



UPC-E0

ON*



OFF



Default All UPC-E Settings



UPC-E1

ON



OFF*



Code 128

ON*



OFF



Default All Code
128 Settings



Codabar

ON*



OFF



Default All Codabar Settings



MaxiCode

ON*



OFF



Default All
MaxiCode Settings



QR Code

ON*



OFF



Default All QR Code
Settings



Data Matrix

ON*



OFF



Default All Data
Matrix Settings



PDF 417

ON*



OFF



Default All PDF
417 Settings



* : Default Option

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.