

MS840P Scanner Quick Reference Guide

Package Contents

	
Wireless laser scanner	USB dongle / USB cable (1550-900054G)
	
Power adapter (1010-601959G)	

Charging the MS840P

1 Charging the MS840P.

Being charged, Red LED ON




2

Fully charged; LED OFF



Connection of the Scanner to a Dongle

1

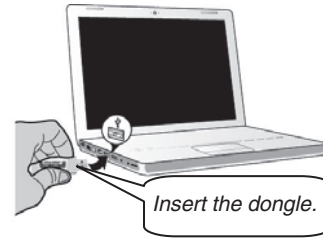


2


Switch the MS840P on



3

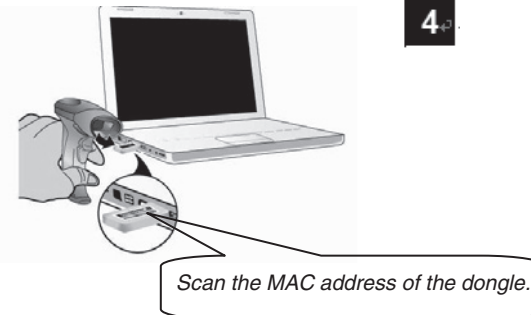

4

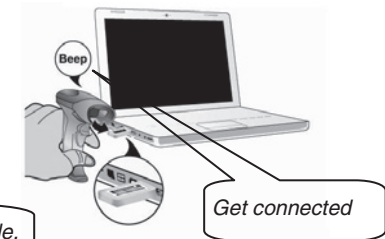

Connection of the Scanner to another Dongle (Optional)

1


Scan the Disconnection barcode.




2



3

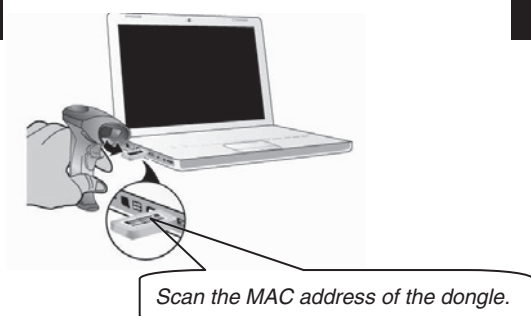


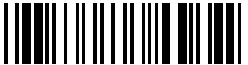
4

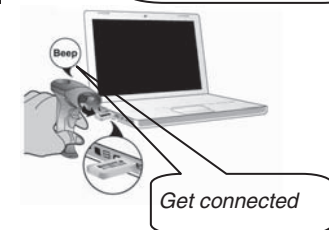


Quick Setup


Scanner Mode



Trigger



Flash

UPC-E



Default


Cut Leading Digit



Send Check Digit



UPC-A Conversion


Display Version


Display Version


EAN-8



Default



Cut Leading Digit


Cut Check Digit

UPC-A


Default


Cut Leading Digit



Cut Check Digit


Scan Code



U.S.



Alt Key

EAN-13



Default



Cut Leading Digit


Cut Check Digit



ISBN Conversion


Beep


None



Medium


Code ID


No



Yes


Inter-Character Delay


1 ms



20 ms

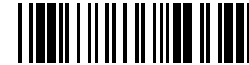
Supplement Code

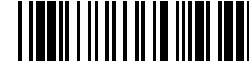
No



Yes

Terminator


Enter


Field Exit

Factory Default


Factory Default